


Wetta

745092

2-Zone Professional Electronic Timer

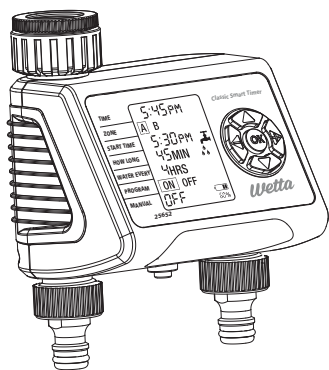

Battery Installation

Install 2 AA Alkaline batteries by removing the battery holder from the back of the timer and inserting the batteries. Replace the battery holder.

Please install fresh batteries if the battery status indicates below  on the LCD display.

Please recycle batteries after use.
Please do not use rechargeable battery.

Programming

Please note for ease of programming,
this unit is best to be set up prior to connecting to your tap.

1. Set Current Time

Press ◀ or ▶ button to decrease / increase time to the current time.
Press ▼ or Ⓞ button to confirm to next step.

Note: The time is set on 12-hour clock. To change to 24-hour clock format, press Ⓞ and hold for 10 seconds.
To return to 12-hour clock, press Ⓞ and hold for 10 seconds again

2. Set Zone

Press ◀ or ▶ to select the zone **A** **B** and press Ⓞ to confirm the zone you want to program.

3. Set Water Start Time

Press ◀ or ▶ button to decrease / increase time to the desired watering start time.
Press ▼ or Ⓞ button to confirm to next step.

4. Set How Long

Press ◀ or ▶ to decrease / increase the duration (up to 240 minutes).
Press ▼ or Ⓞ button to confirm to next step.

5. Set Water Frequency

- There are 11 water frequencies selections available.
- They are every 4HRS, 6HRS, 8HRS, 12HRS, 1 DAY, 2 DAY, 3 DAY, 4 DAY, 5 DAY, 6 DAY and 7 DAY
- Use ◀ or ▶ to select desired watering frequency.
- Press ▼ or Ⓞ button or wait for 3 seconds to confirm to next step.

Move back to Zone and select the unprogrammed zone.
Repeat the programming steps 2, 3, 4 and 5 to set-up the other zone.

current time	TIME	5:45 PM
zone (A, B)	ZONE	A B
water start time	START TIME	5:30 PM
water duration (1-240 min.)	HOW LONG	45 MIN
water frequency (4,6,8,12,hrs, 1-7 days)	WATER EVERY	4 HRS
program status	PROGRAM	ON OFF
manual	MANUAL	OFF
		  battery status

Activate Programming

- Press ◀ or ▶ button to move the indicator  to "ON".
- Press ▼ or Ⓞ button to confirm "ON" to activate the program.

Disabling the Program

In the case of suspending automatic watering for an extended period,

- Press ◀ or ▶ button to move the indicator  to "OFF".
- Press ▼ or Ⓞ button to confirm "OFF" to disable the program.

Manual Watering

During non-watering time, you may activate this mode to start watering.

- Press ▶ to start set up MANUAL watering duration.
- Press ◀ or ▶ to decrease / increase the duration (up to 240 minutes).
- Press Ⓞ button to confirm.

Installation

Attach timer to faucet and hose. Open the faucet and leave it open.
Water will come on and shut-off at the selected time.

Care and Maintenance

- For outdoor use only.
- Operating water pressure: under 10~100 PSI (0.7~7 bar).
- Operating water temperature: 32°F (0°C) ~ 100°F (38°C).
 - Turn off the faucet and remove the timer from the faucet.
 - Manual on the timer to open the valve to drain out water.
 - Remove the batteries.
 - Dry the timer and store the timer in a dry place.